

4R-MVB Supplement Instructions

If your AODE/4R70W was noted to be 1992-1997 variation, this 4R-MVB is supplied with a "modified" BLACK HARD PCB style connector assembly (original equipment in the 1998+ 4R70W) and a bulkhead case connector to replace your internal wire harness. Remove the connector assembly from the valve body before installing. Use a screwdriver at the connections to pop it free. It is installed during shipping so the user understands how the harness fits. If your 4R70W/4R75W was noted to be 1998+ you can retain the use of your original internal harness and thus might not be supplied with this 4R-MVB.

1992-1997 AODE/4R70W

During VB removal – remove the case bulkhead connector on the passenger side (92-97 WHITE) by pushing it down toward the pan, or pulling down. Replace the connector with the BLACK connector provided and kindly provide the left over harness with your core return.

1998+ 4R70W/4R75W

During VB removal is it not necessary to remove the BLACK case bulkhead connector on the passenger side. You reuse this component and kindly provide the left over harness with your core return.

NOTE: PLEASE DO SILVERFOX A FAVOR AND PROVIDE ALL USABLE COMPONENTS FROM THE SWAP WITH THE CORE RETURN! It is a great help to have surplus of these parts for future customers.

Leave all factory equipped accumulators and springs in place, do not remove or modify them unless suggested otherwise by any other documentation in this packet. The base 4R-MVB REQUIRES THE 1-2 AND 2-3 accumulators to prevent excessive shock to the internals and driveline. We have found it does not delay shift timing by any significant amount, and provides better street manners. The 4R-MVB-TB does NOT use the accumulators, BUT THEY MUST STILL BE INTACT.

OVERDRIVE 12v+ (PINK: TERM 8, and RED/WHT: TERM 7 – BOTH WIRED TOGETHER ON SAME SIDE OF SWITCH)

A 12v on/off switch is required to activate OD. OD CAN ONLY BE ACTIVATED IN THE OD/3RD GEAR POSITION.

*****NOTE*** It is highly discouraged to shift from 4-2 without turning OFF the OD switch to take 3rd first. The biggest failure of this transmission with a MVB is forgetting to switch the OD OFF – leading to an accidental 2-4 up shift (skipping 3rd) which stresses the Input shaft and OD band.**

TORQUE CONVERTER LOCKUP 12v+ (YELLOW: TERM 3)

A 12v on/off switch is required to activate LU (Lockup). LU CAN BE ACTIVATED IN THE 2nd/3rd/4th GEAR POSITIONS.

*****NOTE*** It is highly discouraged to engage LU in 2nd and up shift with LU engaged. Another failure of this transmission is related to input shaft and direct drum damage in high torque applications ESPECIALLY if you shift under LU condition from 2-3, or even worse 2-4 as noted above. PLEASE USE LU IN 3rd AND 4th ONLY. Special wire harnesses are available at an extra cost if you wish to disable OD and LU in lower gear as a preventative measure.**

*****NOTE*** You can wire both OD and LU together all on one switch if you intend to not use LU in any other gear.**

CONSTANT 12V- GROUND (RED: TERM 4)


The RED wire in the universal external wire harness supplied needs to be grounded. You can simply use a ring terminal and ground this to a rear tail housing bolt, or often there is a threaded hole in the mounting ear above the case connector. Grounding to the Chassis or dedicated ground in the vehicles harness is preferred.

WIREING NOTES

The 12v+ must be fused. Running a fused circuit already in the car or by adding your own inline fuse (10A) is suggested. This source should be powered with the ignition only when the key is on. This will prevent any battery drain or solenoid failure if you forget to turn off the OD or LU switch when parked.

Shielded connectors prevent shorting against anything. If you hardwire external connection you will be forced to cut the wire when removing the trans. Use the pluggable connectors when you can.

ALTERNATE WIREING METHODE (REVERSE POLARITY)

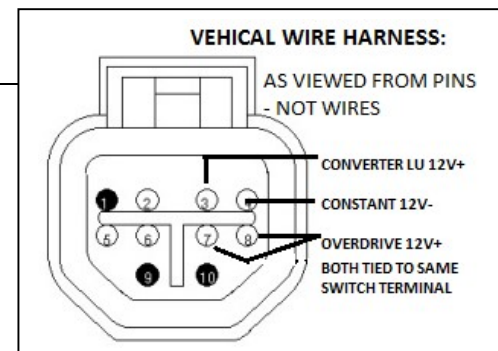

In some cases depending on where you intend to place the switches in the car or if any additional electronics are being used in conjunction with the OD and LU switch (brake switches, relays, roll control) you may desire to switch the solenoids with 12v- and not 12v+. Simply reverse the polarity of the wires indicated above. The RED wire will now need to be supplied with a constant 12v+, fused, ignition source. The switches for OD and LU will now simply need to make a circuit to a ground source – which is often easier to find (ie, chassis).
